

ENGINE FIRE, SEVERE DAMAGE OR SEPARATION

Condition: Fire is detected in the related engine; severe damage which may be associated with airframe vibration and / or abnormal engine indications has occurred; or the engine has separated.

- AUTO THROTTLE (if engaged) Disengage**
- Thrust lever (affected) Close**
- Engine start lever CUTOFF**
- Engine fire warning switch Pull**

If the Engine fire warning switch or ENG OVERHEAT light remains illuminated:

- Engine Fire warning switch Rotate L or R**

If after 30 seconds the Engine fire warning switch or ENG OVERHEAT light remains illuminated:

- Engine Fire warning switch Rotate to remaining bottle**

- ISOLATION valve switch CLOSE**
- PACK switch (affected) OFF**
- APU BLEED air switch..... OFF**

If the APU is available:

- APU START**
- APU GENERATOR..... ON**
- FUEL BALANCE**

Do the
ONE ENGINE INOPERATIVE LANDING checklist
when appropriate.

